



Article	Part No.	Description
BOLT	11230-08181	ALL; ABS
	11230-08181	ALL; ABS
BOLT(W/WASHER)	11230-08161	ALL; ABS
BOLT	11250-06161	ALL; ABS
BRACKET-ABS WHEEL SENSOR LH	59845-H1060	ALL; ABS
BRACKET-ABS WHEEL SENSOR RH	59845-H1070	ALL; ABS
SENSOR ASSY-FR ABS.LH	59810-H1050	ALL; ABS
SENSOR ASSY-FR ABS.RH	59830-H1050	ALL; ABS
BRACKET A-ABS SENSOR LH	59850-H1050	ALL; ABS
BRACKET A-ABS SENSOR RH	59855-H1050	ALL; ABS
BRACKET B-ABS SENSOR LH	59870-H1050	ALL; ABS
BRACKET B-ABS SENSOR RH	59875-H1050	ALL; ABS
SENSOR ASSY-RR ABS.LH	59880-H1050	ALL; ABS
SENSOR ASSY-RR ABS.RH	59890-H1050	ALL; ABS
SENSOR-"G"	95640-M3110	ALL; ABS
SENSOR ASSY-LATERAL G	95690-2E500	2900 CC, 3500 CC; ABS