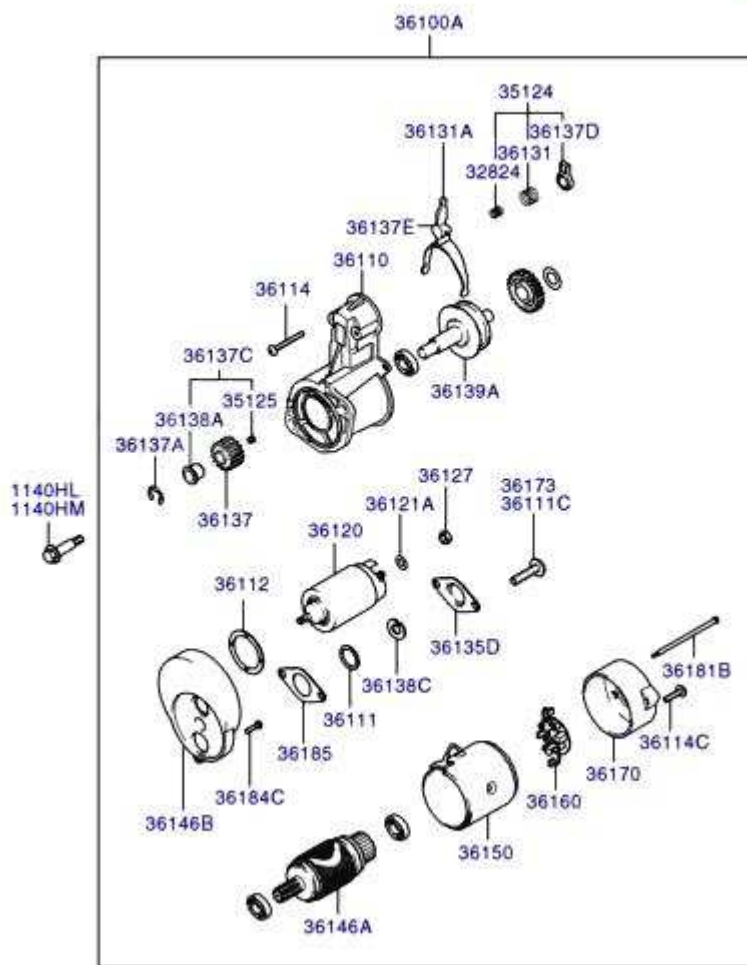


D4BH

Article	Part No.	Description
BOLT	11404-10553	3500 CC
BOLT(FLANGE)	11404-10603	3500 CC, D4BH(4D56 TCI)
BOLT	11404-10653	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
BOLT	11404-12503	2900 CC
BOLT	11404-12603	2900 CC
LEVER SPRING B	36136-42100	D4BH(4D56 TCI)
SPRING	36138-47650	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
SPRING	36136-93000	D4BH(4D56 TCI)
STARTER ASSY	36100-35900	3500 CC
	36100-42050	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	HQ808670	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	HQ808670	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	HK988300	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
STOPPER KIT-STARTER PINION	36138-32510	3500 CC
BRACKET ASSY-STARTER FR	36110-35900	3500 CC

	36110-42010	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36110-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36110-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36110-42010	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
COVER-STARTER	36110-39800	3500 CC
HOUSING	36110-4X220	2900 CC
	36110-4X221	2900 CC
WASHER-ADJUST	36135-93200	D4BH(4D56 TCI)
SCREW	36135-42010	D4BH(4D56 TCI)
WASHER-ADJUSTER	36112-42000	D4BH(4D56 TCI)
STEEL BALL	36112-4X200	2900 CC
BOLT	36114-42020	D4BH(4D56 TCI)
SCREW	36114-42010	D4BH(4D56 TCI)
SCREW	36114-4X200	2900 CC
SWITCH ASSY-STARTER MAGNETIC	36120-35010	3500 CC
	36120-35511	3500 CC
	36120-42001	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36120-42001	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
SWITCH ASSY-STARTER MAGNETIC	36120-4X200	2900 CC
	36120-4X100	2900 CC
WASHER-SPRING	36121-93000	D4BH(4D56 TCI)
NUT	36122-93000	D4BH(4D56 TCI)
LEVER KIT-STARTER PINION SHIFT	36130-32510	3500 CC
GEAR IDLE	36130-4X200	2900 CC
LEVER SPRING A	36136-42000	D4BH(4D56 TCI)
LEVER	36130-42000	D4BH(4D56 TCI)
LEVER	36131-32510	3500 CC
GEAR DRIVE	36131-4X100	2900 CC
	36131-4X200	2900 CC
LEVER PACKING	36135-32510	3500 CC
LEVER PACKING	36135-38040	3500 CC
COVER-HOLDER	36135-42300	D4BH(4D56 TCI)
SPRING COIL	36136-4X200	2900 CC
PINION KIT	36137-42010	D4BH(4D56 TCI)
RING-STOP	36139-93200	D4BH(4D56 TCI)
GEAR ASSY-INTERNAL	36136-35510	3500 CC
PINION SET	36137-47000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
LEVER PACKING	36137-42020	D4BH(4D56 TCI)
LEVER HOLDER	36137-42100	D4BH(4D56 TCI)

STOPPER	36139-93100	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
STOPPER-CENTER	36135-93300	D4BH(4D56 TCI)
O-RING	36138-4X200	2900 CC
PACKING-STARTER	36139-32510	3500 CC
CLUTCH ASSY-OVER RUNNING	36139-42000	D4BH(4D56 TCI)
O-RING	36139-4X200	2900 CC
RETAINER	36140-4X200	2900 CC
GEAR-STARTER REDUCTION PINION	36141-32510	3500 CC
SHAFT ASSY-GEAR	36143-32510	3500 CC
CLUTCH-OVER RUNNING	36145-32510	3500 CC
ARMATURE ASSY	36150-35510	3500 CC
	36150-42000	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36150-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
BRACKET ASSY-CTR	36141-42010	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36141-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36141-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36141-42010	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
YOKE ASSY-STARTER	36160-32510	3500 CC
	36160-42001	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36160-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36160-42051	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36160-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
ARMATURE ASSY-STARTER	36150-4X200	2900 CC
BRUSH-STARTER	36155-35010	3500 CC
HOLDER & BRUSH ASSY	36169-35010	3500 CC
CLUTCH SUB ASSY	36160-4X200	2900 CC
	36160-4X100	2900 CC
CLUTCH ROLLER	36161-4X200	2900 CC
SPRING-BRUSH	36162-32510	3500 CC
SPRING-BRUSH	36164-32510	3500 CC
BRACKET-STARTER RR	36180-35050	3500 CC
	36180-35900	3500 CC
	36181-42010	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36181-47600	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
BRUSH HOLDER ASSY	36170-32510	3500 CC
	36170-42000	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD

	36170-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36170-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
	36170-47650	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE, -COLD ZONE
YOKE ASSY	36171-4X200	2900 CC
HOLDER ASSY BRUSH	36172-4X200	2900 CC
SCREW-SET	36135-47600	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
BOLT-THROUGH	36184-32510	3500 CC
	36184-42000	D4BH(4D56 TCI), T/C INTER COOLER, 4 SPEED AT 4WD
	36184-42000	D4BH(4D56 TCI), T/C INTER COOLER, 5 SPEED MT 4WD; FUEL INJ-ELECTRONIC TYPE
SLEEVE BEARING-RR BRKT	36182-35510	3500 CC
BOLT	36184-42010	D4BH(4D56 TCI)
THROUGH BOLT	36184-4X200	2900 CC
PLATE	36135-42200	D4BH(4D56 TCI)
CLAMP-STARTER	36186-35010	3500 CC
STARTER ASSY	36100-4X210	2900 CC
	36100-4X211	2900 CC