

2006 TOYOTA TACOMA ELECTRICAL WIRING DIAGRAM SYSTEM CIRCUITS

	Page
ABS (w/ VSC)	172
ABS (w/o VSC)	182
Accessory Meter	234
Air Conditioning	268
Audio System (Built-in Type Amplifier)	260
Audio System (Separate Type Amplifier)	256
Auto LSD	172
Automatic Glare-Resistant EC Mirror	230
Back-Up Light	126
Charging	76
Cigarette Lighter	244
Clock	250
Combination Meter	262
Cruise Control (1GR-FE)	158
Cruise Control (2TR-FE)	164
Door Lock Control	202
Downhill Assist Control	172
Electronically Controlled Transmission and A/T Indicator (1GR-FE)	144
Electronically Controlled Transmission and A/T Indicator (2TR-FE)	152
Engine Control (1GR-FE)	78
Engine Control (2TR-FE)	90
Engine Immobiliser System (1GR-FE)	102
Engine Immobiliser System (2TR-FE)	106
Front Fog Light	116
Headlight	110
Hill-Start Assist Control	172
Horn	238
Ignition	72
Illumination	122
Interior Light	130
Key Reminder	142
Light Auto Turn Off System	138
Multi Mode 4WD	212
Multiplex Communication System (CAN)	170
Power Outlet (115V)	240
Power Outlet (12V)	244
Power Source	64
Power Window	196
Rear Differential Lock (2WD)	218
Rear Differential Lock (4WD)	212
Remote Control Mirror	228
Seat Belt Warning	232
Shift Lock	226
SRS	187
Starting	68
Stop Light	128
Taillight	118

	Page
Tire Pressure Warning System	252
TRAC	172
Trailer Towing	246
Turn Signal and Hazard Warning Light	134
VSC	172
Wiper and Washer (w/ INT Time SW)	222
Wiper and Washer (w/o INT Time SW)	224
Wireless Door Lock Control	206